


Note

Rear window wiping-washing system 1st version

The rear window wiper is switched on by detent switch (3).

As long as the tipping switch (4) is pushed, the wiper and washer system operates independent of wiping-washing system of windshield.

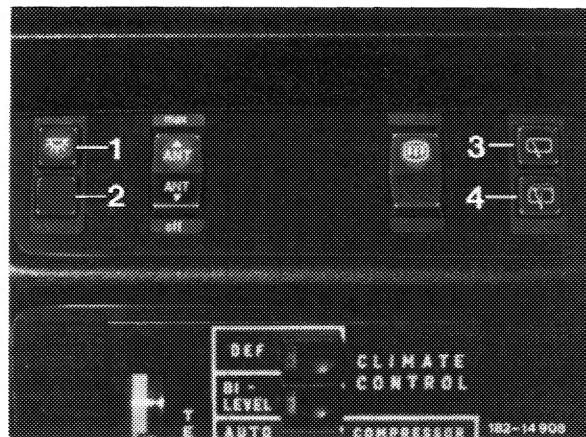


Rear window wiping-washing system 2nd version

The rear window wiper is provided with an electronic interval wiper system.

Tipper switch (2) actuates the wiper and washer system.

Detent switch (3) switches back window wiper.


Tipper switch (4) switches back window wiper to interval wiping.

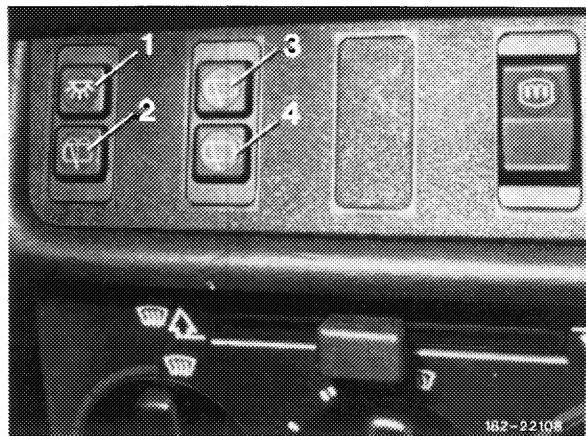

Removal and installation of wiper system

Removal


- 1 Remove wiper arm with blade.

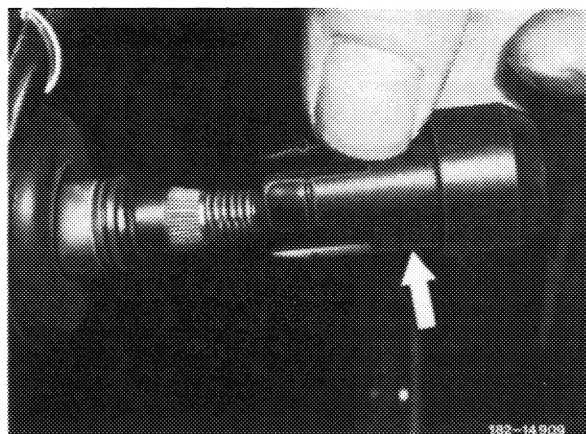


2 Pull out covering sleeve (arrow).

3 Remove lining of backdoor, pulling off upper clipped-in cover.


4 Unscrew and remove lining at top, in center and below.

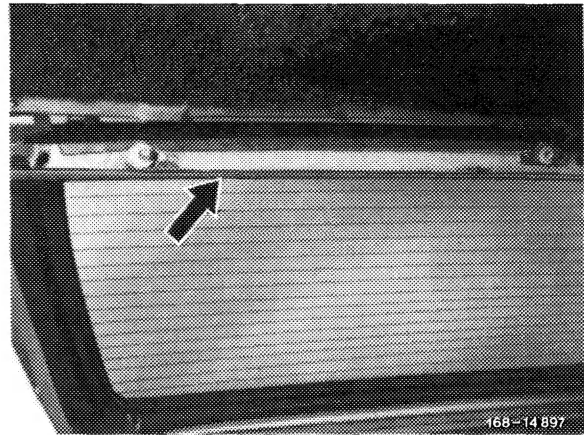


5 Unscrew fastening screws (1) of wiper system.

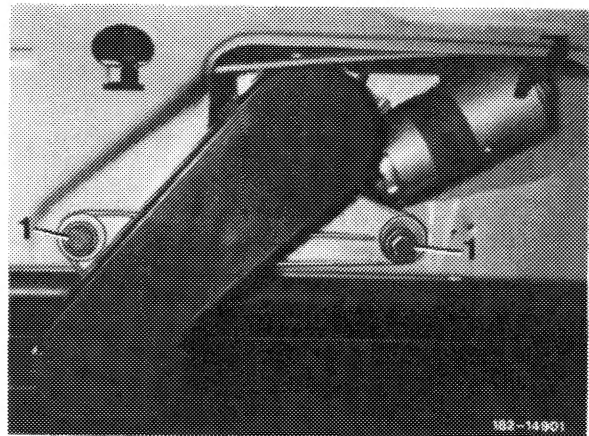

6 Pull complete system out of rubber guide (2).

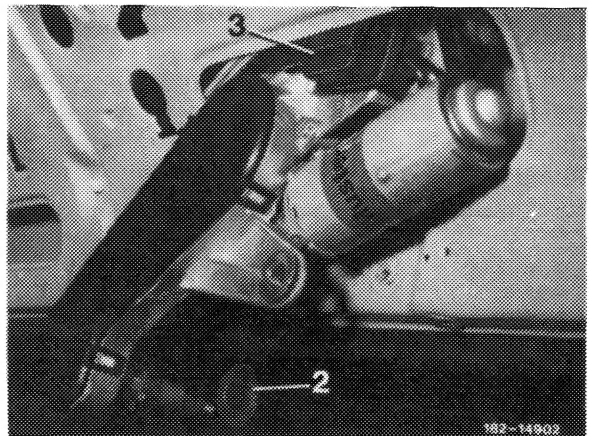

7 Remove complete system from rear holder (4) and pull off coupler for electric connections (3). Completely remove wiper system.

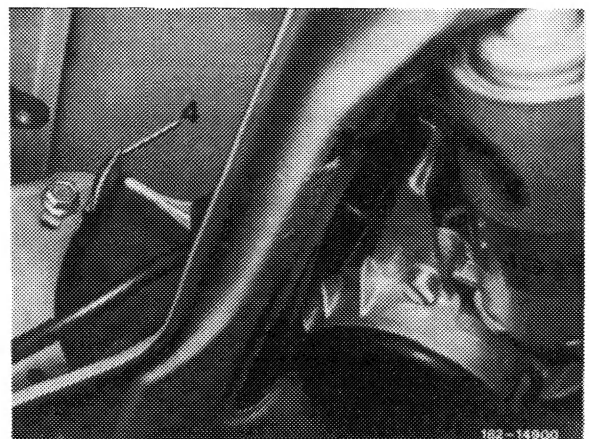

Installation



For installation proceed vice versa.

Removal and installation of nozzle for washer system

Removal

8 With backdoor closed, loosen fastening screw from inside.

9 Slide nozzle to the left until hook at the right is disconnected. Slightly raise nozzle at the right and remove to the rear right. Pull nozzle from hose and make sure that the hose is not retracting into roof frame.

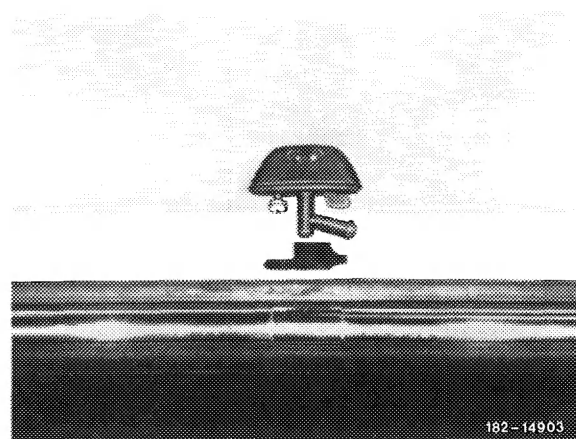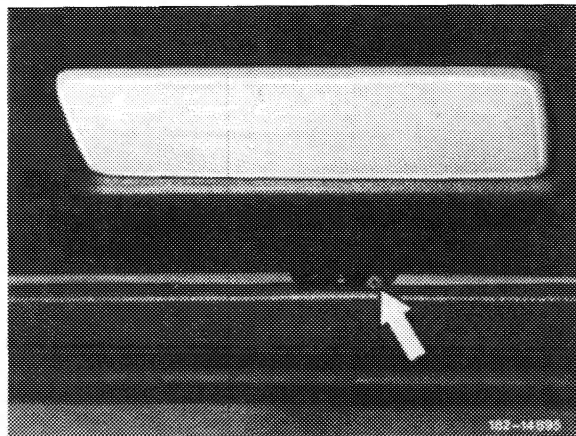

Installation

For installation proceed vice versa.

- 1 Water reservoir
- 2 Washer pump

